


Fig 3. Load and Gain Setting

THIS DIAGRAM IS ONLY SHOWING 1 CHANNEL.

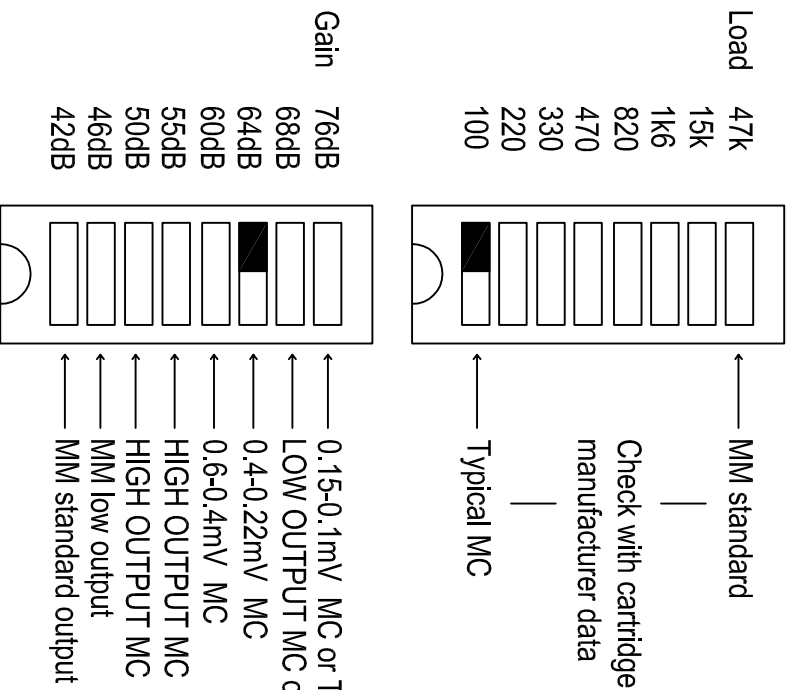

NB:

1. Only adjust gain and load when the TITAN power is off and the pre/ amplifier volume down to zero.
2. Use a semi-hard plastic nib to select switches.
3. Check the cartridge manufacturers specification for correct setting.
4. After the correcting the setting, replace the cover and 2 screws
5. Go to the 'connections' section in the manual to find out how to connect the TITAN to your system.